Cabin Air Filter Installation Instructions

Interior ventilation filter is located underneath the passenger side cowl cover.

- Raise and support the hood.
- 2. Remove (2) cowl cover retaining pins. Remove the weather-strip and raise the cowl cover. (See Figure 1)
- 3. Remove the filter and frame out of housing and replace the filter. (See Figure 2)
- 4. Installation is in the reverse order of installation.

Approximate install time: 15 minutes

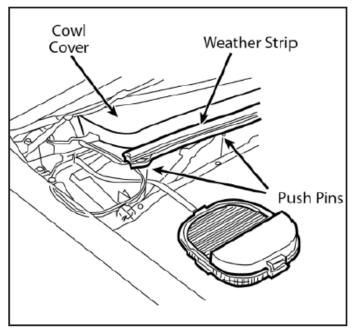


Figure 1

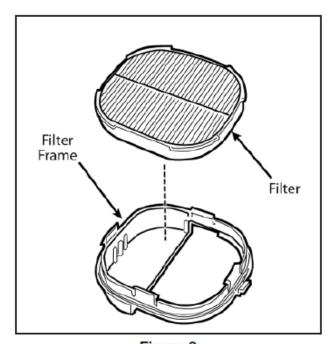


Figure 2



1300PrattBoulevard Elk Grove Village, Illinois 60007 Tech Help Line: 1–800–528–6695 www.atp-inc.com