

Cabin Air Filter Installation Instructions

Interior ventilation filter is located underneath hood at passenger side engine compartment.

1. Raise and secure hood.
Detach (3) hold-down clips from the air intake box.
(See Figure 1)
2. Release (2) housing cover clips and remove housing cover. (See Figure 2)
3. Slide filter up out of housing.
(See Figure 3)
4. Installation is in the reverse order of removal.

Approximate install time: 10 minutes

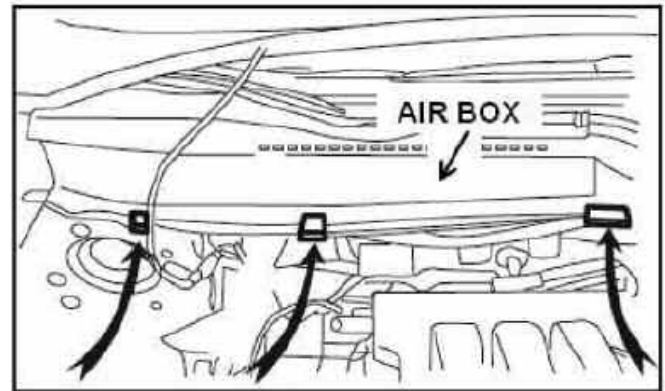


Figure 1



Figure 2

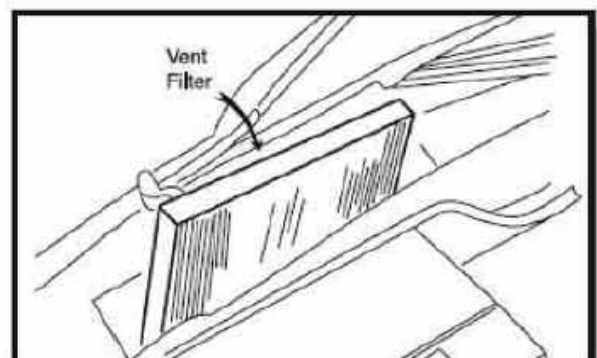


Figure 3

atp
professional auto parts®

1300 Pratt Boulevard
Elk Grove Village, Illinois 60007
Tech Help Line: 1-800-528-6695
www.atp-inc.com