

Cabin Air Filter Installation Instructions

Interior ventilation filter is located above passenger side kick panel, inside the cooling unit.

1. Remove the cooling unit air inlet duct cover from the cooling unit. (See Figure 1)
2. Detach the filter housing cover from the cooling unit and slide filter out of housing. (See Figure 2)
3. Install filter back into housing, attach the housing cover and install the air inlet duct cover back onto the cooling unit.

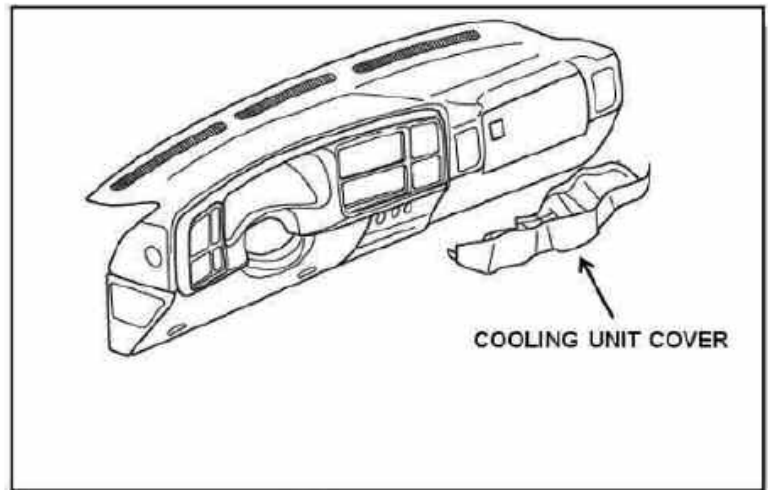


Figure 1

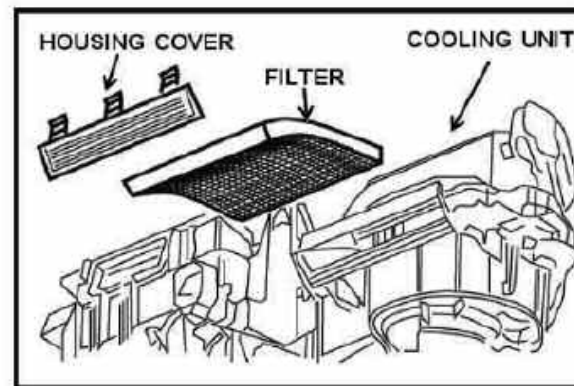


Figure 2

Approximate install time: 10 minutes

atp

professional auto parts®

1300 Pratt Boulevard
Elk Grove Village, Illinois 60007
Tech Help Line: 1-800-528-6695
www.atp-inc.com