

Cabin Air Filter Installation Instructions

Interior ventilation filter is located behind the glove box compartment door.

1. Open the glove box door. Push in on both side of the inner door to release door from stop latches. (See Figure 1)
2. Pull out on the filter housing cover retainer tab to release cover and remove cover. (See Figure 2)
3. Slide filter out of housing towards you. (See Figure 3)
4. Installation is in the reverse order of removal.

Approximate install time: 5 minutes

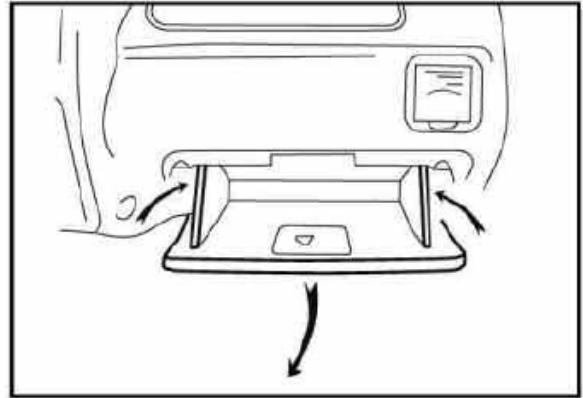


Figure 1

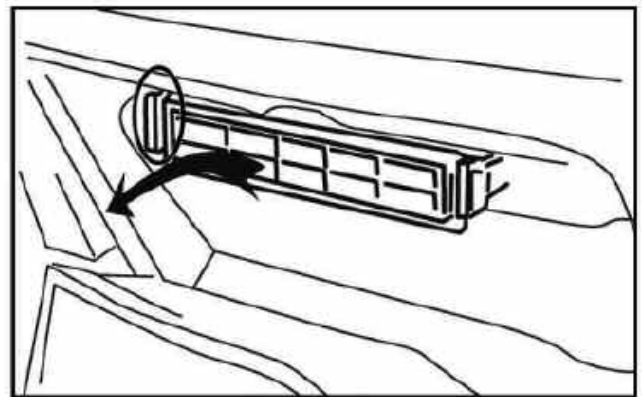


Figure 2

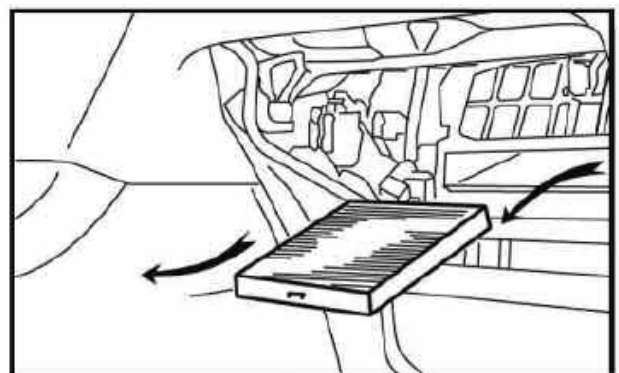


Figure 3

atp

professional auto parts®

1300 Pratt Boulevard
Elk Grove Village, Illinois 60007
Tech Help Line: 1-800-528-6695
www.atp-inc.com