

Cabin Air Filter Installation Instructions

Interior ventilation filter is located inside filter housing, behind glove box compartment assembly.

1. Remove (9) glove box compartment mounting screws and remove the glove box compartment. (See Figure 1)
2. Detach (4) housing cover clips and remove the cover. Slide the vent filter out of housing. (See Figure 2)
3. Installation is in the reverse order of removal.

*Approximate install time:
10 minutes*

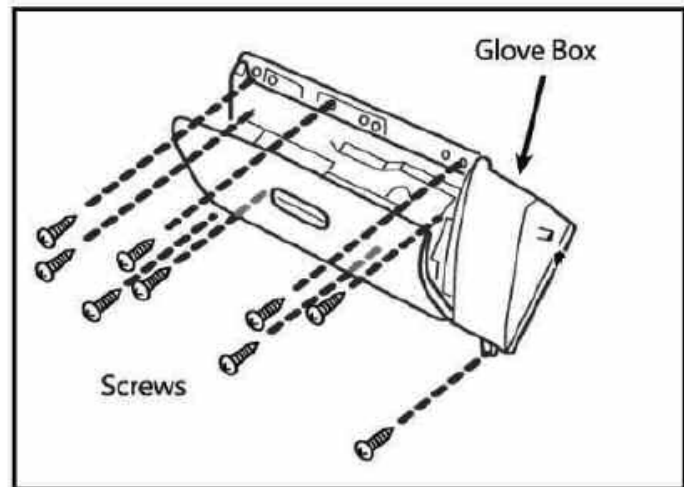


Figure 1

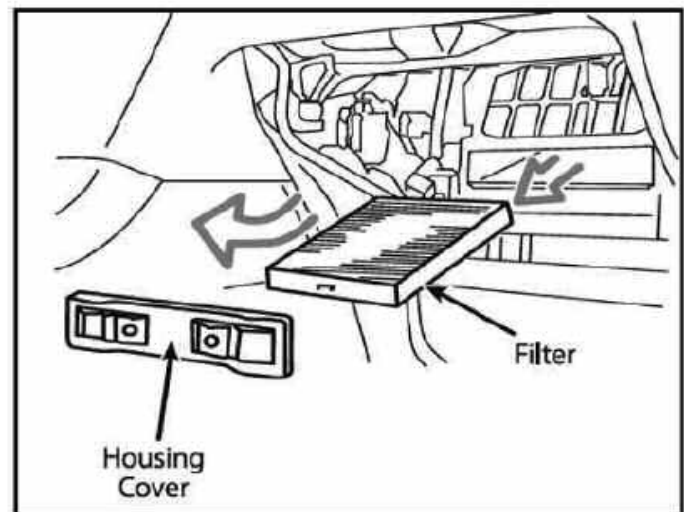


Figure 2

atp
professional auto parts®

1300 Pratt Boulevard
Elk Grove Village, Illinois 60007
Tech Help Line: 1-800-528-6695
www.atp-inc.com