Cabin Air Filter Installation Instructions

The interior vent filter is located under the cowl on the passenger side of the vehicle.

- Both windshield wiper arms must be removed. Pull the wipers away from the windshield so they point away from it.
- 2. Rotate each retaining clip at the base of each windshield wiper counterclockwise. Hold each clip in this position while removing the wiper Figure 1

arm.

- Remove the six screws from the cowl shield at the base of the windshield. (See Figure 1)
- 4. Open hood.
- Remove the four plastic screws from the forward section of the cowl shield.
- Disconnect the windshield washer hose from the Y-connector located at the rear passenger corner of the engine compartment.
- 7. Remove the cowl shield.
- 8. Remove the four screws from the interior vent filter cover.
- Pull the interior vent filter forward and remove from the vehicle. (See Figure 2)


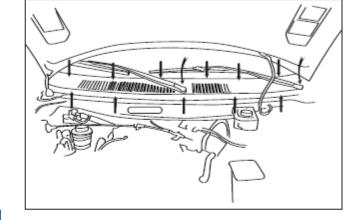


Figure 2



Install the filter and reinstall the cowl shield in the reverse order of removal.

Approximate Installation Time: 30 Minutes

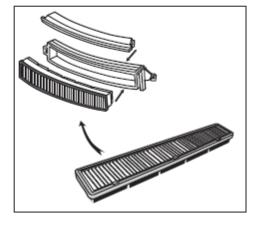

1300PrattBoulevard Elk Grove Village, Illinois 60007 Tech Help Line: 1–800–528–6695 www.atp-inc.com