

# Cabin Air Filter Installation Instructions

Interior vent filter is located in filter housing behind the glove compartment.

1. Open the glove compartment door.
2. Tilt the glove compartment door down by squeezing on each side of the bin to remove the stops from its tracks. Lower compartment door completely down. (See Figure 1)
3. Reach through opening to gain access to the filter housing door. Raise the tab until the filter housing door can be opened downward.
4. Slide interior vent filter out of its housing. (See Figure 2)
5. Installation is in the reverse order of removal.

Figure 1


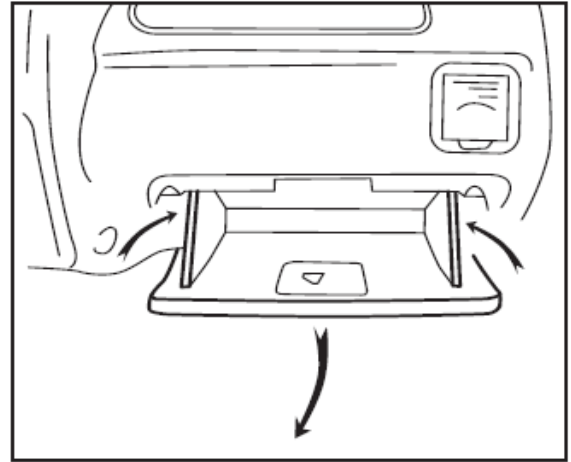


Figure 2

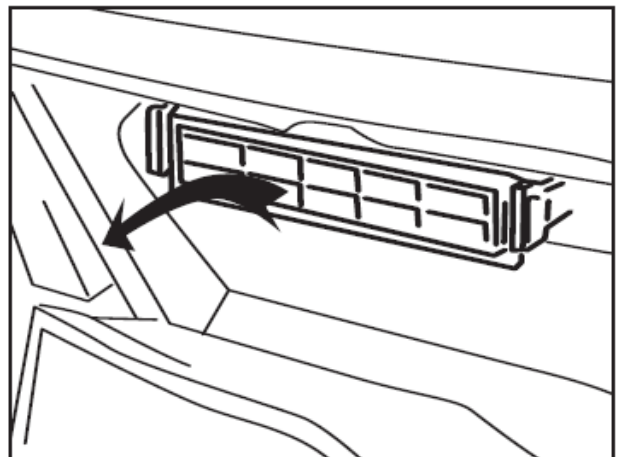

*Approximate Installation Time: 20 Minutes*

**atp**

professional auto parts®

1300 Pratt Boulevard  
Elk Grove Village, Illinois 60007  
Tech Help Line: 1-800-528-6695  
[www.atp-inc.com](http://www.atp-inc.com)

# Cabin Air Filter Installation Instructions

Interior ventilation filter is located inside filter housing behind glove box compartment door.

1. Remove glove box door screw located at the lower right hand side of the glove box door.

(See Figure 1)

2. Squeeze the sides of the compartment door to release from the stops and detach the door from the instrument panel.

(See Figure 2)

3. Remove the filter housing front cover and slide filter out of the housing.

(See Figure 3)

4. Installation is in the reverse order of removal.

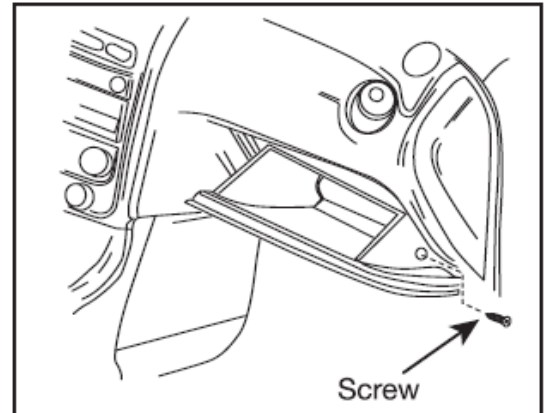


Figure 1

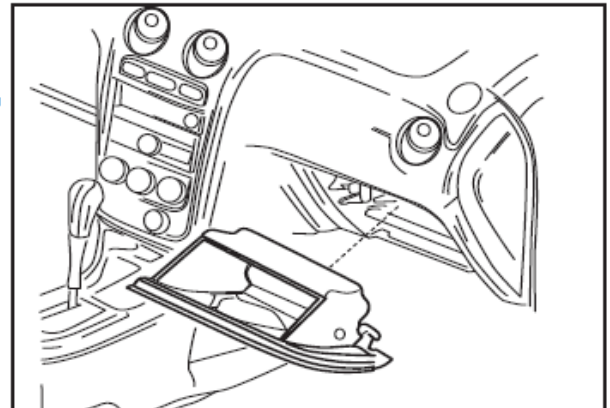


Figure 2

*Approximate  
Installation Time:  
25 Minutes*

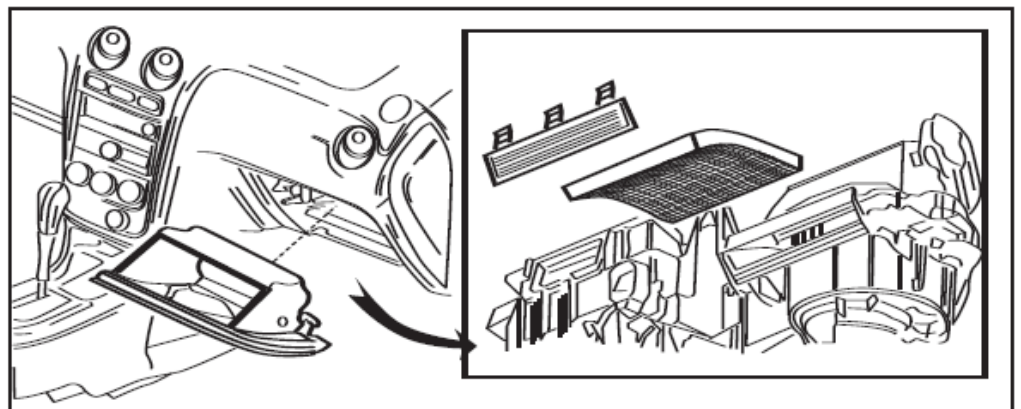


Figure 3

**atp**

professional auto parts®

1300 Pratt Boulevard  
Elk Grove Village, Illinois 60007  
Tech Help Line: 1-800-528-6695  
[www.atp-inc.com](http://www.atp-inc.com)

Form No. GA12-CF33BACK