

Cabin Air Filter Installation Instructions

Interior ventilation filters are located behind the glove box compartment door.

1. Open the glove box door. Disengage the door stops on both sides of the door by pushing the stops inwards from the outer sides of the compartment door. (See Figure 1)
2. Squeeze the locking tabs from the compartment door damper rod and slide rod out and allowing the door to swing completely down. (See Figure 2)
3. Squeeze locking tabs on filter housing cover and remove. (See Figure 3)
4. Slide the first filter and frame out of housing. Grasp second filter and frame and slide to the left and out towards you. (See Figure 4)
5. Install filters back onto frame and install in the reverse order of removal.

Approximate install time: 10 minutes

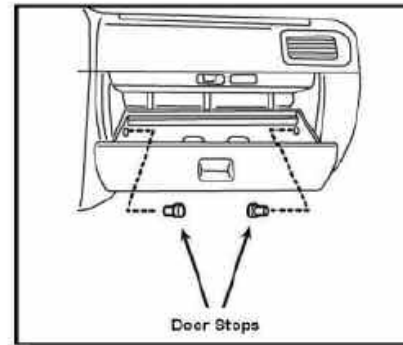


Figure 1

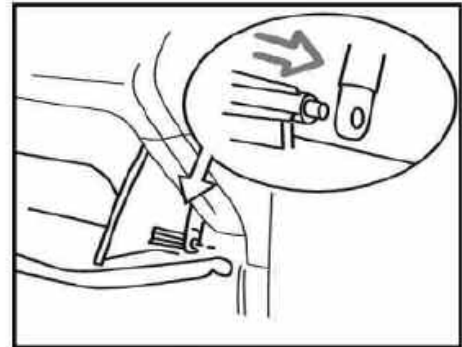


Figure 2

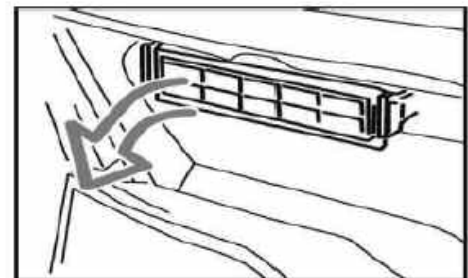


Figure 3

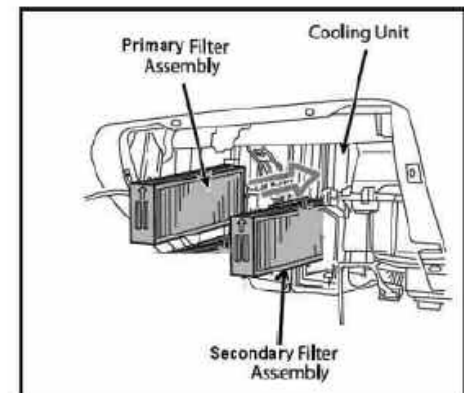


Figure 4

atp

professional auto parts®

1300 Pratt Boulevard
Elk Grove Village, Illinois 60007
Tech Help Line: 1-800-528-6695
www.atp-inc.com