


Cabin Air Filter Installation Instructions

Note: Some Ford Focus models did not have a factory-installed filter. These particular models have a plastic grille in the space where the filter should be. The grille can be discarded when installing the new filter.


1. Open hood.
2. The filter is on the passenger side of the engine compartment.
3. With a screwdriver, release the clips that hold the cowl cover. Separate the two halves and remove the passenger side cover. (See Figure 1)

Figure 1

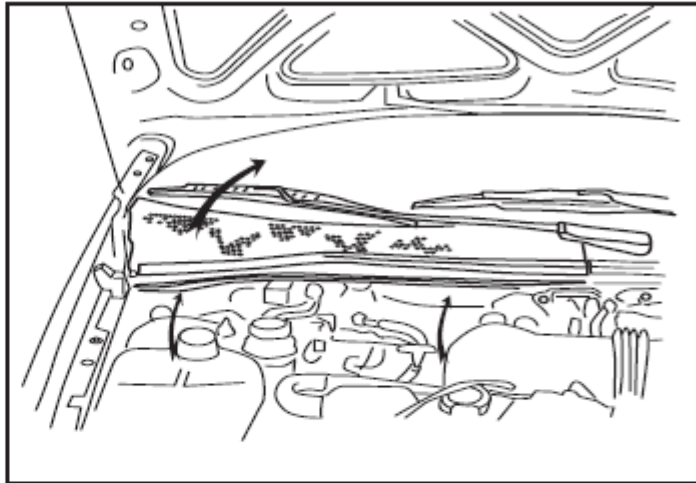

4. Release the clips on the right and left side of the filter housing. Pull down the filter door. (See Figure 2)
5. Pull out the old filter and install the new one. If the vehicle originally came with a plastic grille, discard the grille and install the new filter in its place.

Figure 2

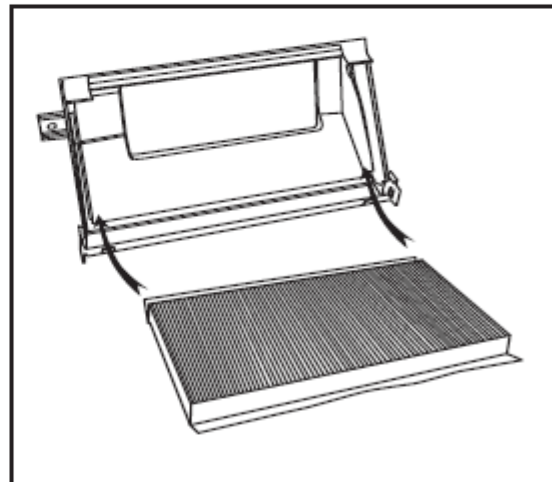

6. Close the filter door. The clips will snap back in place.
7. Replace cowl cover. The clips will snap back in place.

Approximate Installation Time: 25 Minutes

atp
professional auto parts®

1300 Pratt Boulevard
Elk Grove Village, Illinois 60007
Tech Help Line: 1-800-528-6695
www.atp-inc.com

Form No. FA6-CF16