

Cabin Air Filter Installation Instructions

The filter is located behind a panel behind the glove box. Some of these vehicles did not originally come equipped with a filter. You can install a filter on these vehicles.

1. Open glove box.
2. Push in sides of glove box door to lower it until it hangs straight down. (See Figure 1)
3. Remove filter cover by pulling it from the top. (See Figure 2)
4. Remove the top filter, then the lower filter.
5. Replace filters in reverse order of removal.
6. Replace filter cover. It snaps in place.
7. Push in sides of glove box door and close.

Approximate Installation Time: 30 Minutes

Figure 1


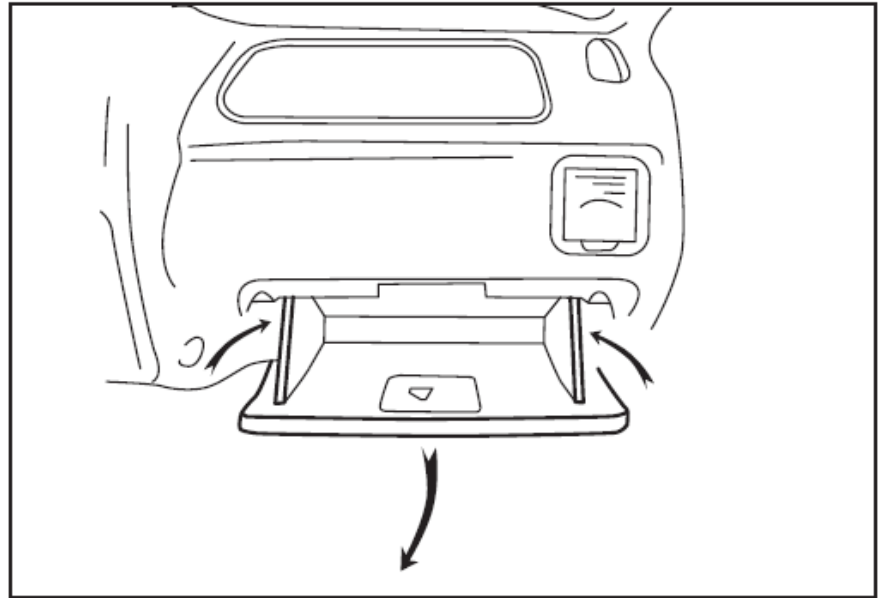


Figure 2

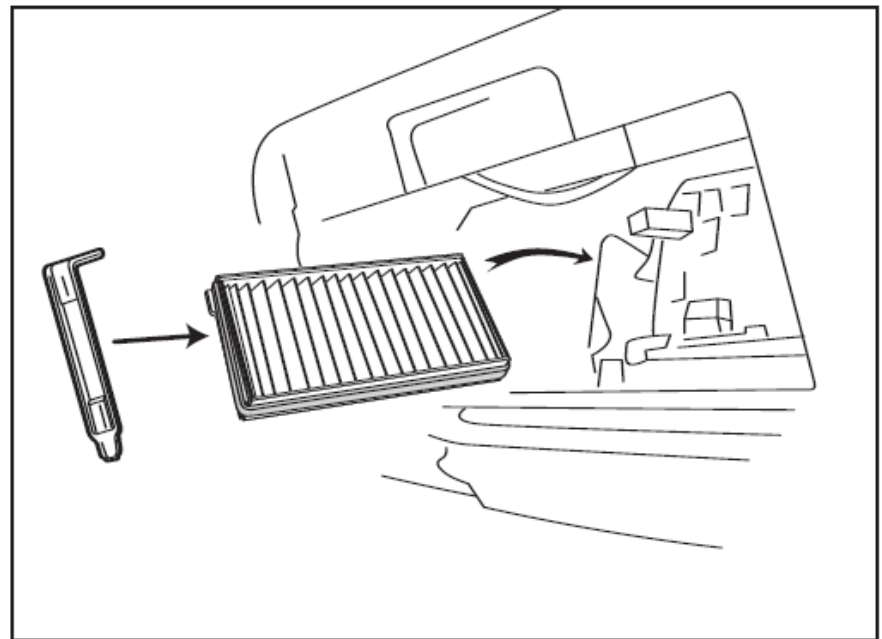

atp
professional auto parts®

1300 Pratt Boulevard
Elk Grove Village, Illinois 60007
Tech Help Line: 1-800-528-6695
www.atp-inc.com

Form No. GA6-CF27